



Acer Iconia One 7 Speaker Replacement

This guide will instruct users how to replace the speaker area of the Acer Iconia One 7.

Written By: Michael



INTRODUCTION

The speaker is essential for the device to make auditory sounds to the user and although it looks sturdy it is a delicate piece of equipment.




TOOLS:


- [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [JIS #00 Screwdriver](#) (1)
-

Step 1 — Speaker



- Begin at any side of the tablet.
- With a plastic opening tool, begin taking apart the back cover from the tablet by working along the edges.

 Prying the lid open can be difficult, use caution in order to safely remove.


 Reminder: Turn off device before this step

Step 2



- Using a plastic opening tool, separate the back cover from the main device.
- Open each side continuously to ensure all sides have been separated,

Step 3


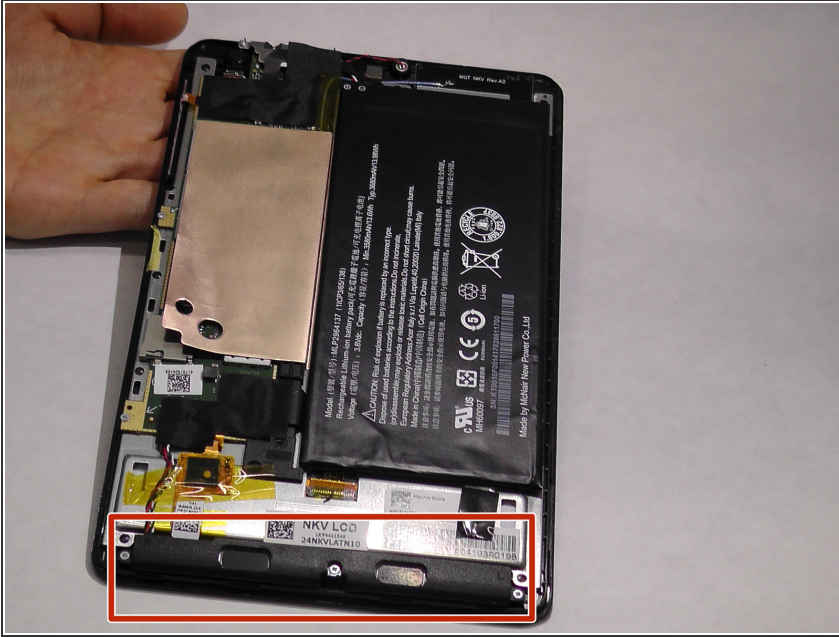


- Turn the tablet over to locate the speaker.

⚠ Besides the parts that are mentioned in the instruction, try not to agitate other fragile components inside the device.



- The speaker is on the bottom of the inside.

Step 4

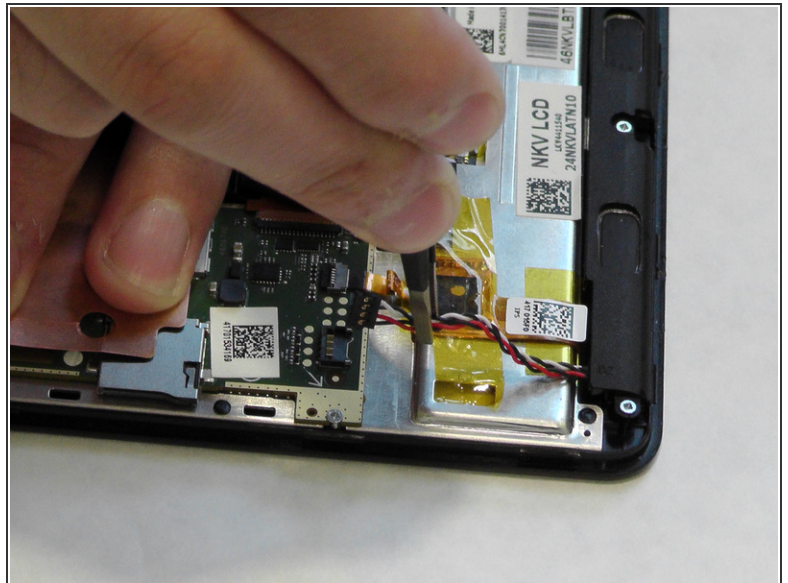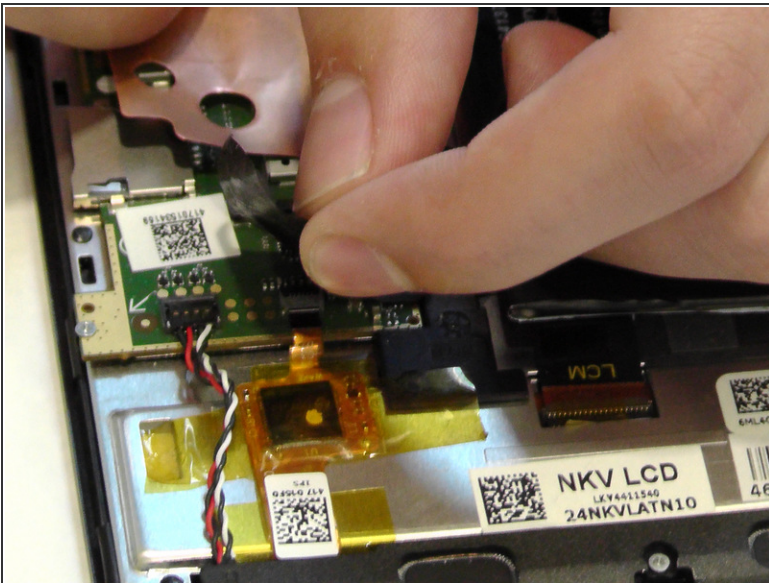

- Peel back tape.
- Using tweezers, detach connection from mother board.

Step 5

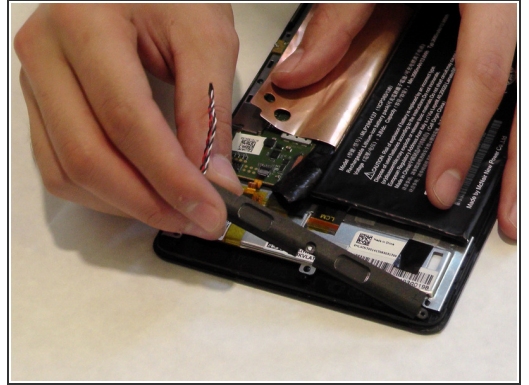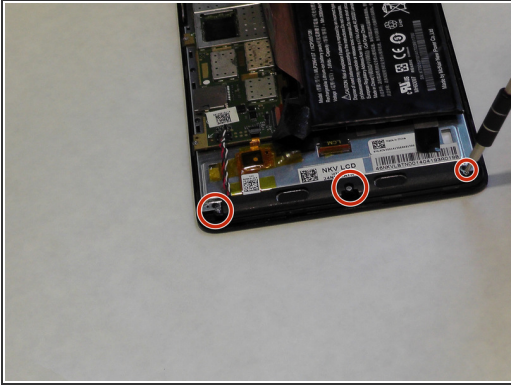

- Unscrew screws with a JIS screwdriver with a #00 screw bit.
- Dislodge the speaker unit.
- ⚠ Take care not to displace any other bits in the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-30 12:43:00 PM.